

**Video • Data • Power**

**HubWay<sup>®</sup>LD<sup>™</sup>**

**NEW!**

**Active UTP Transceiver Hub  
with Integral Camera Power**

## **Installation Guide**

**Models Include:**

**HubWayLD8S**

- Eight (8) Camera Channels

**HubWayLD82S**

- HubWayLD8S w/eight (8) HubWayAv Video Balun/Combiners for 24VAC Cameras

**HubWayLD83S**

- HubWayLD8S w/eight (8) HubWayDv Video Balun/Combiners for 12VDC Cameras



## Overview:

Altronix HubWayLD8S Active UTP Transceiver Hub w/Integral Camera Power transmits UTP video, RS422/RS485 data and power over a single CAT-5 or higher structured cable. Unit provides 8 camera channels in a space saving 1U EIA 19" rack mount chassis which may be rack, wall or shelf mounted. Video transmission range is up to 3000 ft. max. per channel. Units are compatible with AC and/or DC fixed or PTZ cameras when utilizing Altronix HubWayAv or HubWayDv Video Balun/Combiners. In addition, the unit features individually selectable 24VAC or 28VAC PTC protected outputs with surge suppression. An optional HubSat4 Passive UTP Transceiver Hub with Integral Camera Power can be used as an accessory module to transmit video from up to 4 cameras over a single CAT-5 or higher structured cable back to the HubWayLD8S. In addition, the HubSat4 provides power to these cameras locally to eliminate the possibility of voltage drop associated with long cable runs.

## HubWayLD8S Specifications:

### Input:

- 115VAC 50/60Hz, 2 amp or 230VAC 50/60Hz, 1.25 amp.
- Primary fuse (internal) is rated at 5 amp/250V.

### Video:

- Eight (8) channels of video over twisted pair up to 3000 ft.
- Eight (8) 75 ohm video outputs.

### Data:

- RS422/RS485 data inputs.

### Power:

- Individually selectable 24VAC or 28VAC power outputs with OFF position.
- Unit provides up to 1 amp max. per channel not to exceed a total of 5 amp (150VA) maximum current.
- PTC's are rated @ 1 amp.
- Surge suppression.

### Additional Models:

#### HubWayLD82S

- HubWayLD8S includes eight (8) HubWayAv Video Balun/Combiners for 24VAC Cameras.

#### HubWayLD83S

- HubWayLD8S includes eight (8) HubWayDv Video Balun/Combiners for 12VDC Cameras.

### Visual Indicators:

- AC input power indicator.
- Eight (8) video signal LED indicators.

### Features:

- Picture and Gain control.
- Illuminated master power disconnect circuit breaker with manual reset.
- IEC 320 - 3-wire grounded line cord (detachable).
- Unit can be rack, wall or shelf mounted.
- 1U rack mount chassis for use in standard EIA 19" rack.

### Accessories:

- Video Balun/Combiners:
  - HubWayAv - for use with 24VAC cameras.
  - HubWayDv - for use with 12VDC cameras.
- Optional HubSat4 allows transmission of up to four (4) video signals over a single CAT-5 or higher structured cable.

## Installation Instructions:

1. Set the input voltage selector switch located on the left side of the HubWayLD8S unit for 115VAC or 230VAC operation (*Fig. 1k, pg. 4*).
2. Attach mounting brackets to HubWayLD8S unit for rack or wall mount installation (*Figs. 6-7, pg. 8*). Affix rubber pads to HubWayLD8S for shelf installation (*Fig. 8, pg. 8*).
3. Secure the unit in a rack, mount unit to a wall or place unit on a shelf as desired (unit should be spaced at least 3" from any video monitors).
4. Set illuminated master power disconnect circuit breaker to the (OFF) position (*Fig. 5, pg. 7*).
5. Plug the grounded AC line cord (included) into the IEC 320 connector of the HubWayLD8S unit (*Fig. 1f, pg. 4*). Insert the plug end of the line cord into a grounded AC receptacle.
6. Select 24VAC or 28VAC power output for Channels 1-8 with the corresponding voltage adjustment switches (*Fig. 1h, pg. 4*).
7. Connect the BNC video outputs for HubWayLD8S Channels 1 - 8 to the corresponding video inputs on the head end equipment (DVR) (*Fig. 1a, pg. 4*).
8. Connect the RS422/RS485 output of the head end equipment (DVR) to the two (2) data input terminal blocks of the HubWayLD8S unit (polarity must be observed) (*Fig. 1e, pg. 4*).

**Note:** The Data input terminals of the HubWayLD8S must be wired in parallel for proper operation. When using fixed cameras disregard this step.

9. Connect Video Balun/Combiner at camera 1 to the HubWayLD8S unit utilizing CAT-5 or higher structured cable. Plug the RJ45 connector at one end of the structured cable into the RJ45 jack marked [Channel 1] of the

HubWayLD8S (*Fig. 1g, pg. 4*). Plug the RJ45 connector at the opposite end of the structured cable into the RJ45 jack of the Video Balun/Combiner located at camera 1.

- For 24VAC cameras use Altronix model HubWayAv Video Balun/Combiner (*Figs. 2a, 2b, pg. 5*).
- For 12VDC cameras use Altronix model HubWayDv Video Balun/Combiner (*Figs. 2c, 2d, pg. 5*).

Repeat steps 6-9 for each additional camera (Channels 2-8).


**Note:** When a particular camera exceeds the maximum distance for power transmission, a local external power source is required. Optionally, an Altronix HubSat4 Passive UTP Transceiver Hub with Integral Camera Power may be utilized (*Fig. 4a, pg. 6*).

The combined total cable distance must not exceed 3000 ft. for video transmission between the HubWayLD8S and each camera routed through the HubSat4.

10. Set illuminated master power disconnect circuit breaker to the RESET (ON) position (*Fig. 5, pg. 7*) and measure the output voltage at the power output of each Video Balun/Combiner (*Figs. 2b, 2d, pg. 5*) before powering each camera to insure proper operation and avoid possible damage.
  - HubWayAv - Terminals marked [AC POWER] (*Figs. 2a, 2b, pg. 5*).
  - HubWayDv - Terminals marked [- 12VDC +] (*Figs. 2c, 2d, pg. 5*).
11. Set illuminated master power disconnect circuit breaker to the (OFF) position to make the final connections (*Fig. 5, pg. 7*).
12. Connect the power outputs of the HubWayAv or HubWayDv Video Balun/Combiners to the power inputs of the cameras (*Figs. 2a-2d, pg. 5*). Polarity must be observed.
13. Connect the terminals marked [+ DATA -] of the HubWayAv or HubWayDv Video Balun/Combiners to the data terminals of the cameras for PTZ control (*Figs. 2a-2d, pg. 5*). Polarity must be observed. When using fixed cameras disregard this step.
14. Connect the BNC connector of the HubWayAv or HubWayDv Video Balun/Combiners to the BNC video outputs of the cameras (*Figs. 2a-2d, pg. 5*).
15. Upon completion of wiring set illuminated master power disconnect circuit breaker to the RESET (ON) position (*Fig. 5, pg. 7*).
16. AC LED (Green) of the HubWayAv or DC LED (Red) of the HubWayDv Video Balun/Combiners will illuminate indicating power is present at the cameras (*Fig. 2b, 2d, pg. 5*).
17. The video signal indicator LEDs (Red) for Channels 1-8 of the HubWayLD8S will illuminate when video signal is present (*Fig. 1j, pg. 4*). If any of these LEDs are not illuminated, there is no video signal for that corresponding channel.
18. Optimize the picture quality for Channels 1-8 by adjusting the corresponding potentiometer marked [Picture] (*Fig. 1c, pg. 4*).
19. Set gain for Channels 1-8 by adjusting the corresponding potentiometer marked [Gain] (*Fig. 1d, pg. 4*).
20. If any of the Channels 1-8 experience a loss of AC power output, a short circuit or overload condition may be present. The PTC for that particular output is tripped. The trouble condition must be eliminated prior to resetting the PTC. To reset the PTC it is necessary to disconnect the CAT-5 cable of that particular camera [Channels 1-8] and allow approximately 1 minute before reconnecting the CAT-5 cable.

Fig. 1

**1e - Data:** Removable terminal blocks for RS422/RS485 input from head end equipment (DVR) for PTZ control.

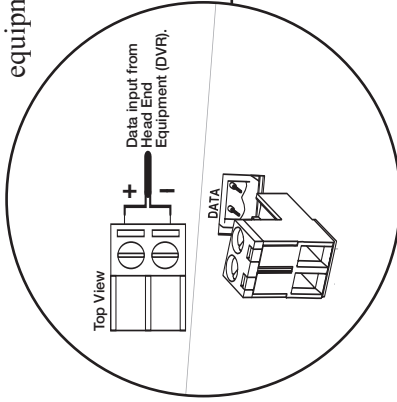


**1b - Channels 1-4 & Channels 5-8:** CAT-5 or higher structured cable(s) from optional HubSat4S provides video transmission from up to four (4) cameras each.

**1c - Picture:** Adjusts video quality.

**1a - BNC Connector:** Video outputs to head end equipment (DVR).

**1d - Gain:** Regulates the output video and sync levels.

**1f - IEC 320 Connector:** 115VAC/230VAC 50/60Hz (grounded line cord included).

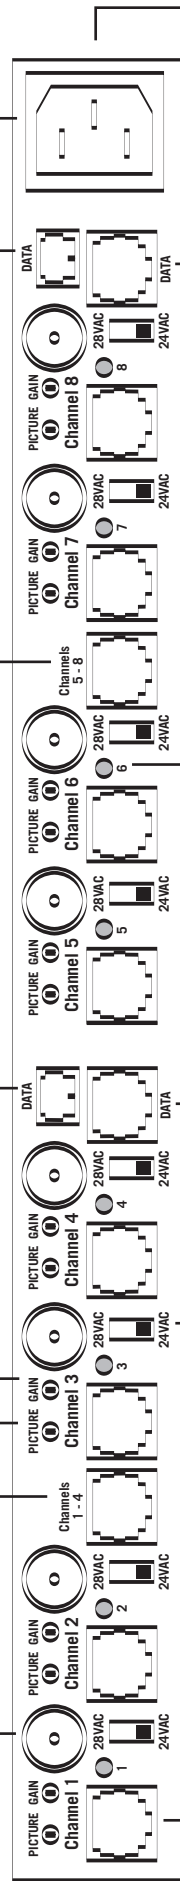

**1j - LED(s) 1-8:** Video signal indicators.

**1g - Channels 1-8:** CAT-5 or higher structured cable to Video/Balun Combiners at cameras 1-8.

**1i - Data:** CAT-5 or higher structured cable from optional HubSat4S for PTZ control.

**1h - Output voltage switches:** Selects 24VAC or 28VAC for each output.

**1k - Input Voltage Switch:** Selects 115VAC/230VAC 50/60Hz (switch is located on the left side of the unit).

## HubWayAv and HubWayDv Video Balun/Combiners:

Altronix Model Number	Input Voltage from HubWay unit	Output Voltage to camera	Camera Type	Power LED
<b>HubWayAv</b>	*24VAC/28VAC	*24VAC/28VAC	24VAC cameras	Green
<b>HubWayDv</b>	*24VAC/28VAC	12VDC	12VDC cameras	Red

\*Based on camera load and structured cable length.

Fig. 2

Fig. 2a

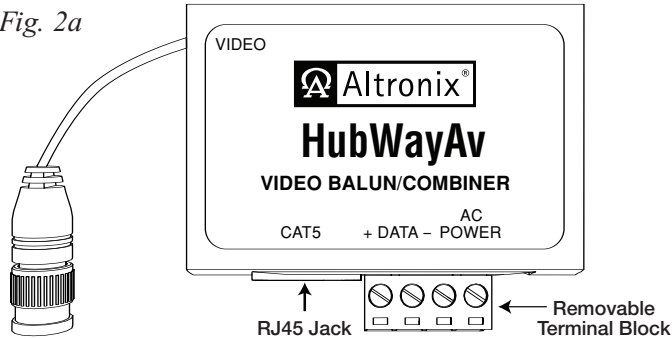


Fig. 2c

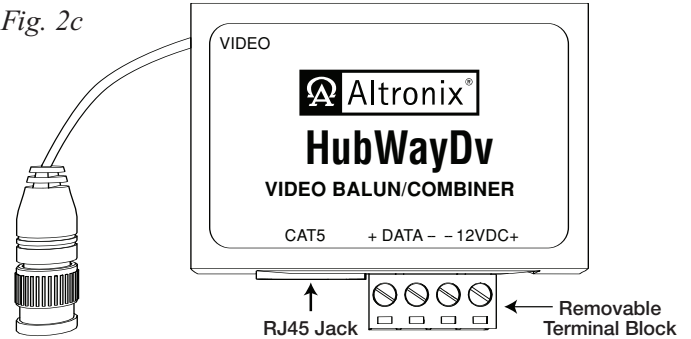


Fig. 2b


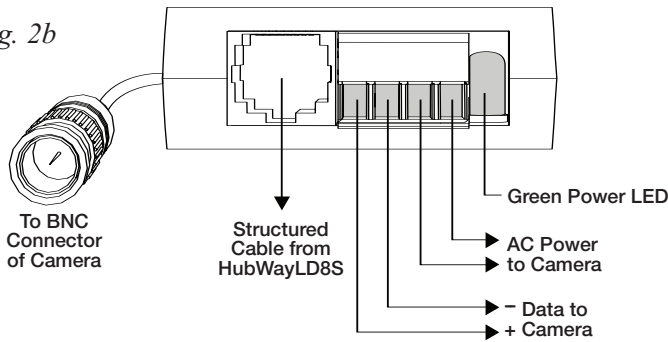



Fig. 2d

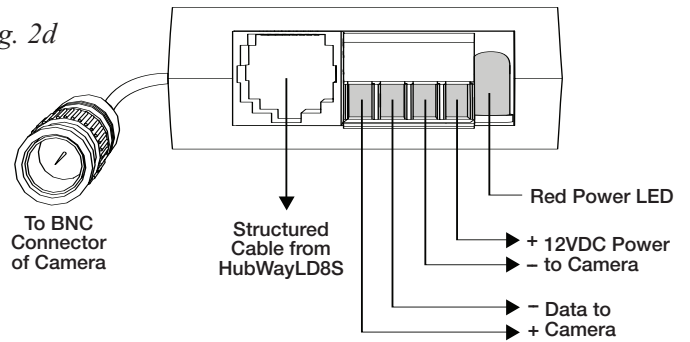

HubWayAv passes AC voltage from pins 4, 5, 7, 8 to terminals marked [AC Power] (Fig. 3, pg. 5).

HubWayDv converts AC voltage to DC voltage from pins 4, 5, 7, 8 to terminals marked [-12VDC+] (Fig. 3, pg. 5).

Fig. 3 - CAT-5 Structured Cable Wiring Color Codes and PIN Configurations

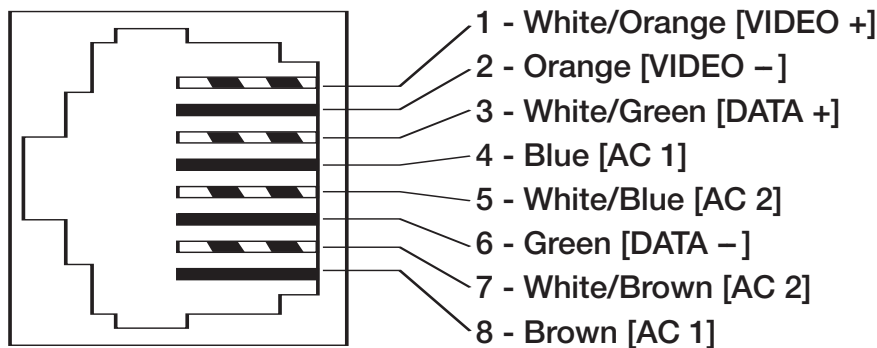




# 1U EIA 19" Rack Mount Chassis Mechanical Drawing & Dimensions:

1.625"H x 19.125"W x 8.5"D

## REAR

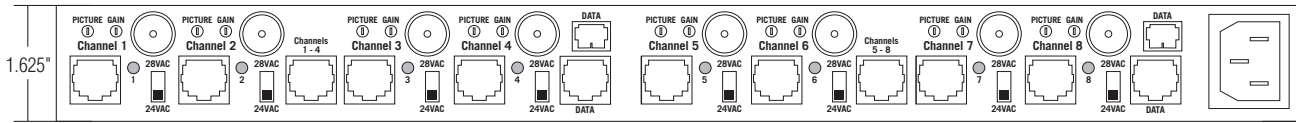

## TOP & BOTTOM



## FRONT


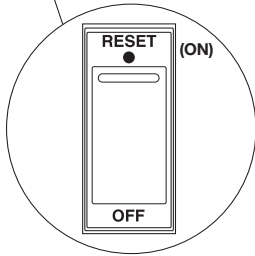


Fig. 5

Illuminated master power disconnect circuit breaker:

- OFF position Circuit breaker tripped – Switch not illuminated.
- RESET (ON) position – Switch illuminated.

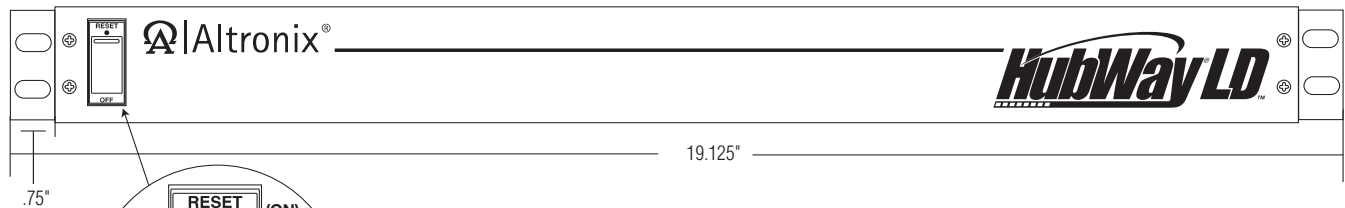

The lightning flash with arrow head symbol within an equilateral triangle is intended to alert the user to the presence of an insulated "DANGEROUS VOLTAGE" within the products enclosure that may be of sufficient magnitude to constitute an electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN




**CAUTION:** To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside. Refer servicing to qualified service personnel.

## Mounting Options:

### Rack Mount Installation

- 1- Remove and discard factory installed screws from both sides of rack chassis (Fig. 6a).
- 2- Install mounting brackets (A) on the left and right side of rack chassis using the four (4) flat head screws (B) (included) (Fig. 6b).
- 3- Place unit into desired EIA 19" rack position and secure with mounting screws (not included) (Fig. 6c).

Fig. 6

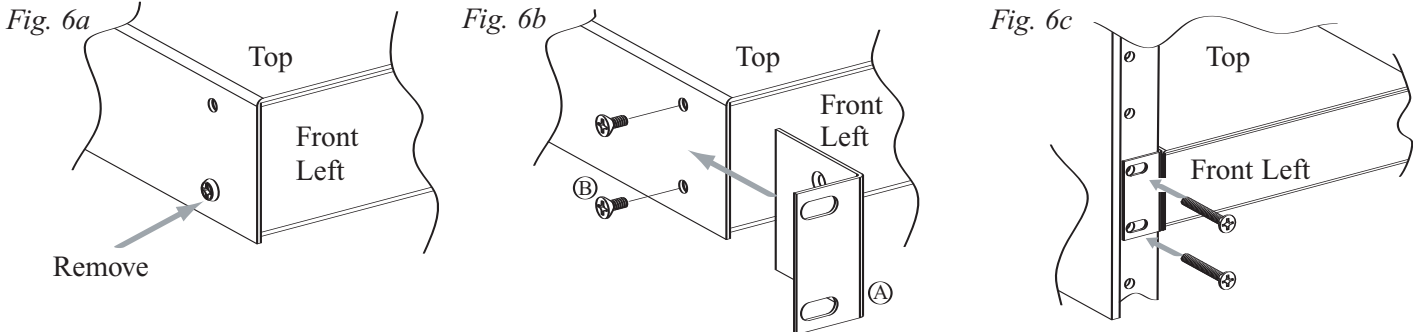

### Wall Mount Installation

- 1- Install mounting brackets (A) on the left and right side of rack chassis using four (4) flat head screws (B) (included) (Fig. 7a).
- 2- Place unit at desired location and secure with mounting screws (not included) (Fig. 7b).

**Caution:** It is necessary to make sure mounting screws are securely fastened to a beam when installing the unit vertically.

Fig. 7

Fig. 7a


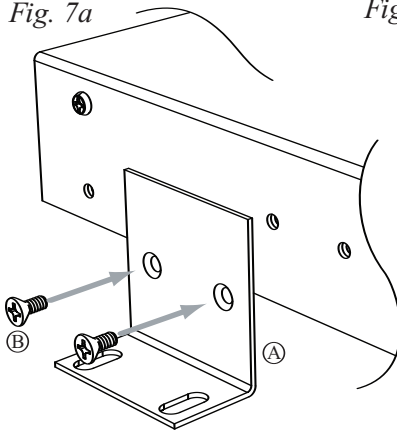


Fig. 7b




Dotted lines indicate studs behind sheetrock.

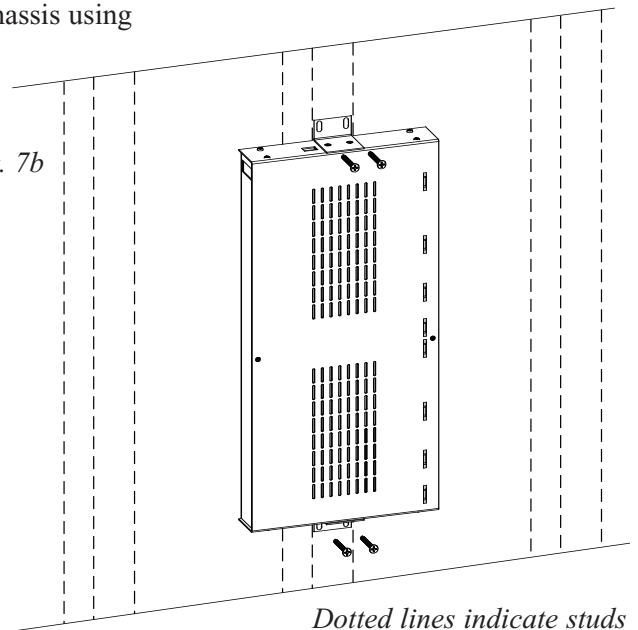


### Shelf Installation

- 1- Position and affix rubber pads (C) (included) at each corner on the bottom of the unit (Fig. 8).
- 2- Place unit in desired location.

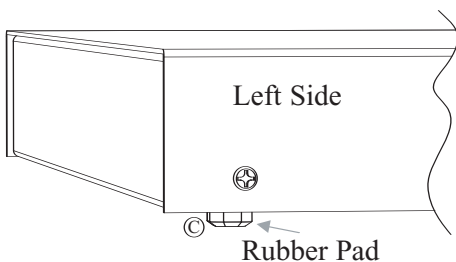Fig. 8

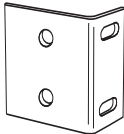

**Mounting Hardware (Included):**

	<b>(A)</b> Two (2) mounting brackets
	<b>(B)</b> Six (6) flat head screws for mounting brackets.
	<b>(C)</b> Four (4) rubber pads.

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA, 718-567-8181, fax: 718-567-9056  
 website: www.altronix.com, e-mail: info@altronix.com, Lifetime Warranty, Made in U.S.A.  
 IIHubWayLD8S F13H

