



Rack Mount Series

UL Listed CCTV Power Supplies

Installation Guide

Models Include:

- ***R248UL***
 - ***24VAC @ 3.5 amp (85VA)***
or 28VAC @ 3 amp (85VA).
 - ***Eight (8) Fuse Protected Outputs.***

- ***R248ULCB***
 - ***24VAC @ 3.5 amp (85VA).***
or 28VAC @ 3 amp (85VA).
 - ***Eight (8) PTC Protected Outputs.***



Overview:

These Altronix Rack Mount CCTV Power Supplies provide 24VAC or 28VAC distributed via eight (8) fuse or PTC protected outputs for powering CCTV Cameras, heaters and other video accessories.

Rack Mount Configuration Reference Chart:

Altronix Model Number	Output Voltage	Total Output Current (Power)	Number of Outputs	PTC Protected Outputs (Class 2 power limited for Dry locations). (Class 3 for Wet locations).	Fuse Protected Class 1 Outputs	Individual Output Current (max per output - not to exceed total output current)	Fuse Ratings	Primary In-line Fuse Ratings	115VAC 50/60Hz Input Current	Agency Listings
R248UL	24VAC	3.5 amp	8	-	Yes	3.5 amp	3.5 amp	3.5 amp/250V	.85 amp	cULus CE
	28VAC	3 amp								
R248ULCB	24VAC	3.5 amp	8	Yes	-	2.5 amp	-	3.5 amp/250V	.85 amp	cULus CE
	28VAC	3 amp		-	Yes					

Specifications:

- UL Listed for Commercial Closed-Circuit Television Equipment (UL2044). CUL Listed - CSA Standard C22.2 No.1-98, Audio, Video and Similar Equipment.
- 24VAC or 28VAC outputs.
- Surge suppression.
- Individual power LED indicators.
- Illuminated power disconnect circuit breaker with manual reset.
- Spare fuse provided (fuse protected model only).
- Unit maintains camera synchronization.
- Ease of installation saves time and eliminates costly labor.
- 2U rack mount chassis for use in standard EIA 19" rack.
- Removable terminal blocks w/locking screw flanges.


Rack Dimensions:

3.25"H x 19.125"W x 8.5"D

Installation Instructions:

1. Mount unit in desired rack location (Space unit at least 3" from any video monitors), Do not obstruct side air vents.
2. Set power disconnect circuit breaker to OFF position (Fig. 1D, pg. 3).
3. All units are factory set for 24VAC operation.
For 28VAC operation, adjust unit prior to mounting and applying power as follows:
Change the wire position so that the wire marked [28V] is connected to the terminal marked [P] and the wire marked [24V] is connected to the terminal marked [S].
Note: R248ULCB set for 28VAC operation is not Class 2 Rated, not power limited.
4. Plug power cord into grounded 115VAC 50/60 Hz receptacle (Fig. 1C, pg. 3), ground should be connected as indicated in (Fig. 1E, pg. 3).
5. Set power disconnect circuit breaker to RESET (ON) position (Fig. 1D, pg. 3).
6. Measure output voltage before connecting devices. This helps avoid potential damage.
All terminals with common suffix (P) "1P, 2P..." are the same polarity.
6. Set power disconnect circuit breaker to OFF position (Fig. 1D, pg. 3).
7. Connect devices to removable terminal blocks marked [1P & 1N through 8P & 8N] for eight (8) output models (Fig. 1A, pg. 3).
When wiring is completed on terminal blocks they can be locked down by tightening screw flanges.
8. Upon completion of wiring, set power disconnect circuit breaker to RESET (ON) position (Fig. 1D, pg. 3).

Fig. 1

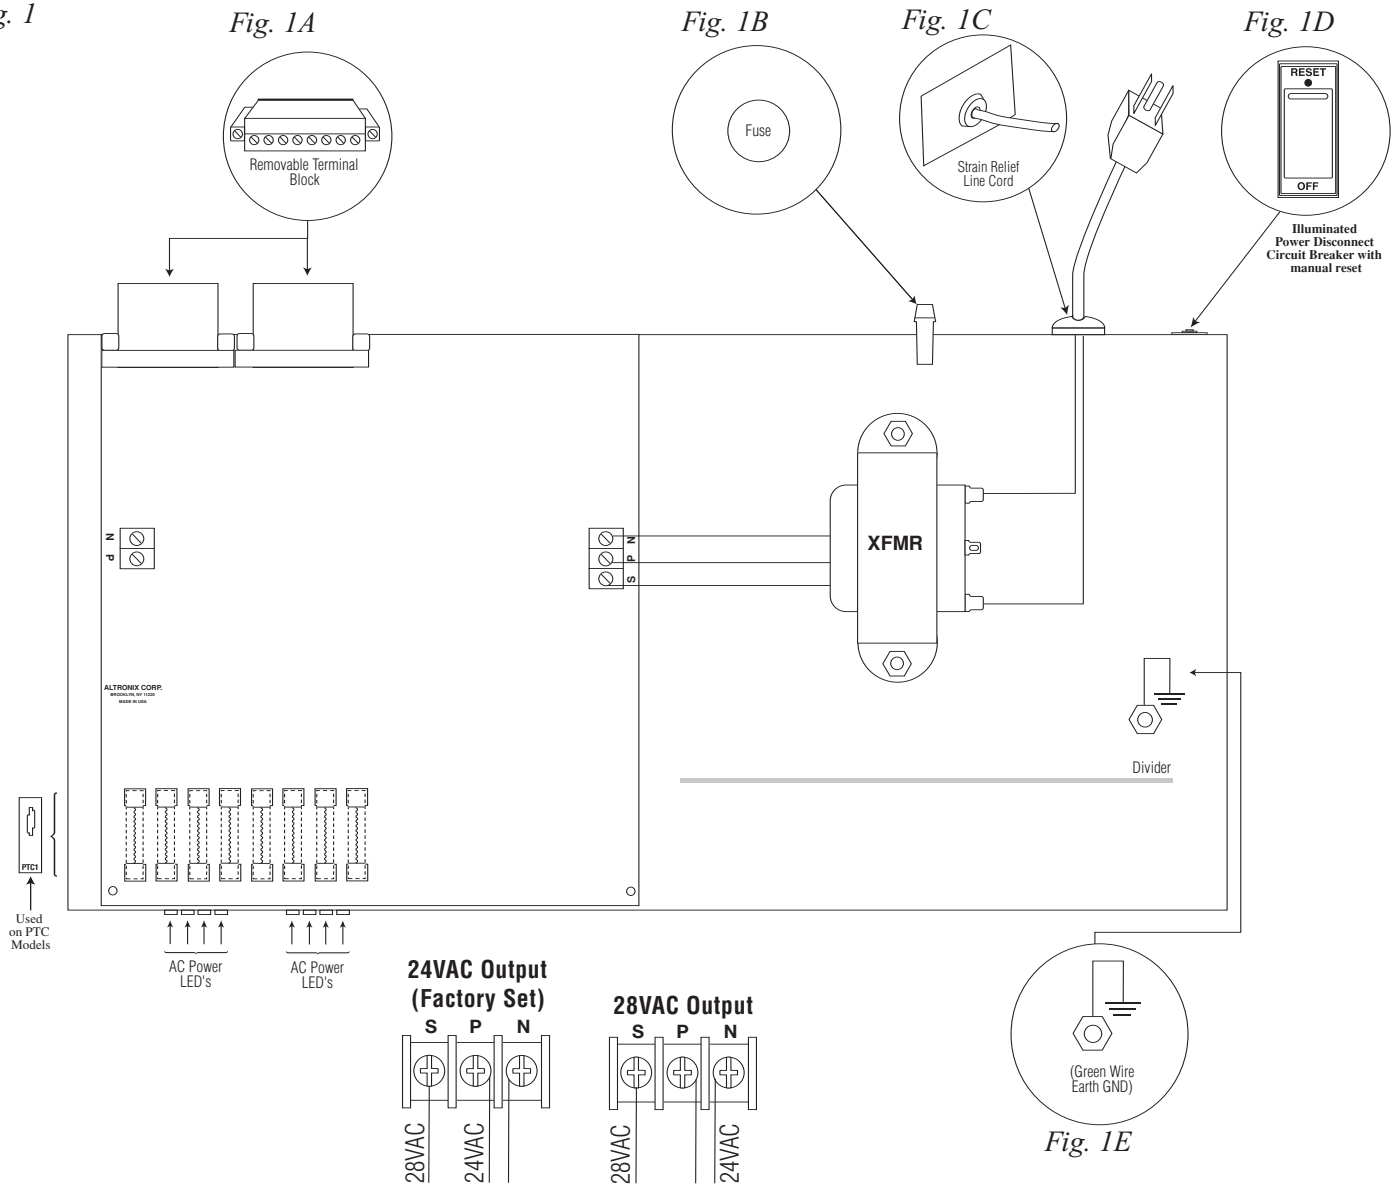

9. Green power LEDs on faceplate will illuminate when power is present. When an output is in a trouble condition (blown fuse or tripped PTC) the corresponding LED will not be illuminated (*Fig. 1, pg. 3*).
 - a. Blown fuse (R248UL) - Set power disconnect circuit breaker on back of unit to the OFF position (*Fig. 1D, pg. 3*). Remove front faceplate to access fuses. Replace with fuses rated @ 3.5A/250VA (Altronix model # Fuse1).
 - b. Tripped PTC (R248ULCB) - To reset PTC, set power disconnect circuit breaker on back of unit to the OFF position. After approximately 30 secs. set power disconnect circuit breaker to the ON (RESET) position (*Fig. 1D, pg. 3*).
 10. Illuminated power disconnect circuit breaker with manual reset:
 - OFF position - Switch not Illuminated. Outputs not powered.
 - RESET (ON) position - Circuit breaker illuminated. Outputs powered.
 - Circuit breaker tripped - Circuit breaker is not Illuminated. Power LEDs on faceplate are not illuminated. Outputs not powered.

To reset circuit breaker set power disconnect circuit breaker to RESET (ON) position (*Fig. 1D, pg. 3*).
- Note:** Do not exceed units electrical load ratings as indicated in reference chart (*pg. 2*).
 Do not place mechanical load on unit. Unit is designed optimally for normal data room office installations.
 Data racks should always be properly ventilated.

WARNING: To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture. This installation should be made by qualified service personnel and should conform to all local codes and in accordance with the National Electrical Code.



For fuse protected models:

Replace fuses with the same type and rating 3.5A/250V.



The lightning flash with arrow head symbol within an equilateral triangle is intended to alert the user to the presence of an insulated “DANGEROUS VOLTAGE” within the products enclosure that may be of sufficient magnitude to constitute an electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN




CAUTION: To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside. Refer servicing to qualified service personnel.

Rack Mechanical Drawing & Dimensions


3.25”H x 19.125”W x 8.5”D

View from back

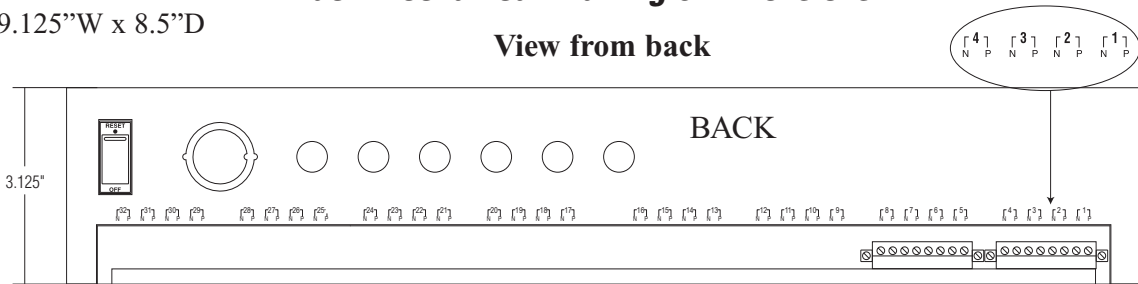


17.625"

BOTTOM

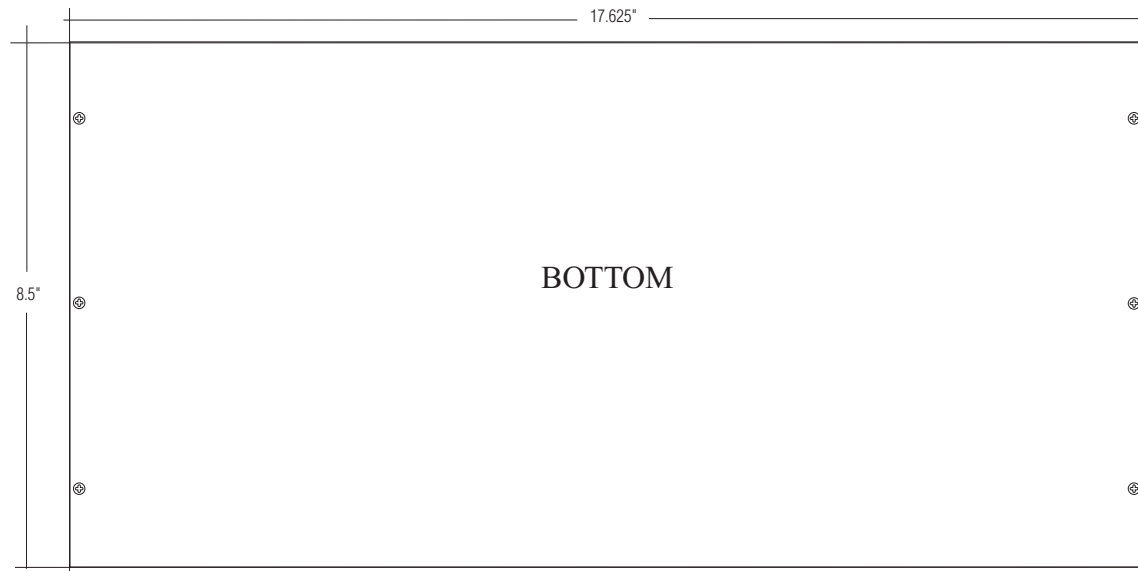

View from front

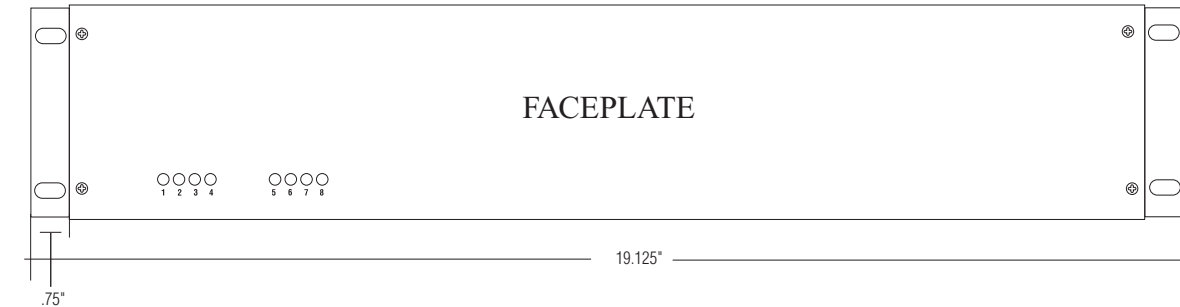

FACEPLATE

.75"

Altronix is not responsible for any typographical errors.

Altronix Corp.
140 58th Street, Brooklyn, New York 11220 USA, 718-567-8181, fax: 718-567-9056
web site: www.altronix.com, e-mail: info@altronix.com, Lifetime Warranty, Made in U.S.A.
I1248RackMountSeries J04F

